


Sinclair ZX Spectrum 128K +2A/+2B and +3 Edge Connector

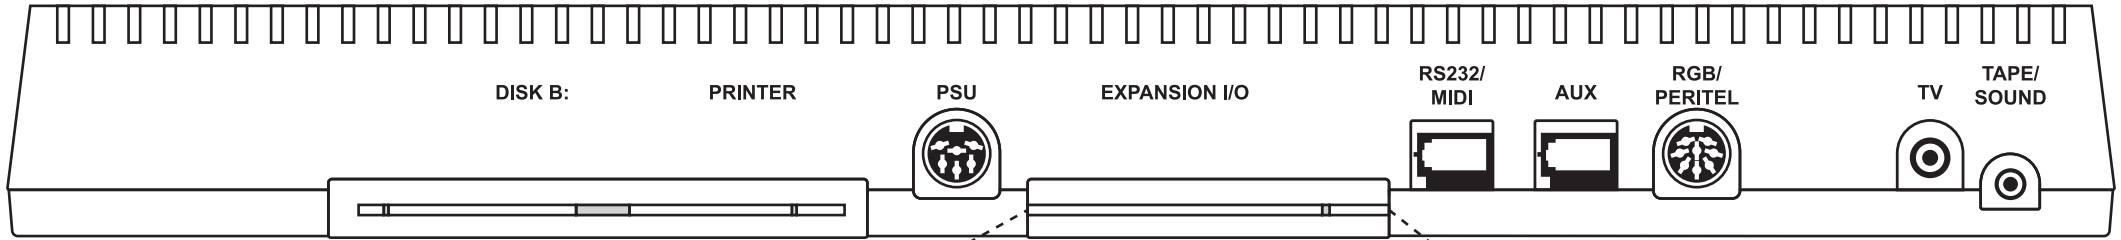

A11	28B	28A	RESET
A9	27B	27A	A10
<u>BUSACK</u>	26B	26A	A8
NOT USED	25B	25A	<u>RFSH</u>
A4	24B	24A	<u>M1</u>
A5	23B	23A	-12volts
A6	22B	22A	+12volts
A7	21B	21A	<u>WAIT</u>
<u>RESET</u>	20B	20A	NOT USED
<u>BUSRQ</u>	19B	19A	<u>WR</u>
<u>MOTOR ON</u>	18B	18A	<u>RD</u>
<u>DISK WR</u>	17B	17A	<u>IORQ</u>
<u>DISK RD</u>	16B	16A	<u>MREQ</u>
ROM2 <u>OE</u>	15B	15A	<u>HALT</u>
0volts GND	14B	14A	<u>NMI</u>
NOT USED	13B	13A	<u>INT</u>
A3	12B	12A	D4
A2	11B	11A	D3
A1	10B	10A	D5
A0	9B	9A	D6
CK	8B	8A	D2
0volts GND	7B	7A	D1
0volts GND	6B	6A	D0
SLOT	5B	5A	SLOT
NOT USED	4B	4A	ROM1 <u>OE</u>
+5volts	3B	3A	D7
A12	2B	2A	A13
A14	1B	1A	A15

Note: Pin numbers differ from official manuals